



# JBL PROFLORA Cal

Complete kit for calibration

Suitable for:



- Professional use of pH electrodes for aquariums: complete set for the calibration, cleaning and maintenance
- Easy to use: Fill buffer solutions into cuvettes. Remove electrode from the water. Immerse and rinse dry electrode according to instructions
- Removal of deposits. No falsification of the pH value: precise measurement due to cleaned electrode
- Safe storage: small bottle with screw cap. Can be used several times
- Package contents: calibration, maintenance and storage kit ProFlora Cal, incl. calibration solution pH 7 and pH 4 (50 ml each), distilled water for rinsing (50 ml), storage/cleaning solution (50 ml), 3 cuvettes





# JBL PROFLORA CaI

## Accessories



**JBL Buffer Solution pH 4.0**  
Calibration solution with pH 4.0 for pH electrodes



**JBL Buffer Solution pH 7.0**  
Calibration solution with pH 7.0 for pH electrodes



**JBL Storage Solution**  
Cleaning and storage solution for pH electrodes



**JBL Dest**  
Distilled water to clean pH electrodes



# JBL PROFLORA CaI



## Product information

### Healthy fish and plants

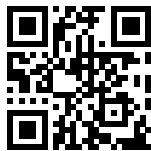
The pH value defines the acidity of the water. It needs to be constantly checked and adjusted as necessary to maintain the health of the fish and plants. The right pH value depends on the fish stock of the aquarium. The wrong pH value can cause stress and diseases. Using an electrode the value can be precisely measured.

### Cleaning and care of electrodes

Bacteria, lime and other impurities which settle on the electrode can falsify the real pH value. The regular cleaning and calibration of the electrode ensure precise measurement and an unaltered pH value. Electrodes always need to be stored in a humid place.

### Easy to use

Add 10 ml of each of the three buffer solutions into separate cuvettes. Remove electrode from the water and dry it off. Immerse the electrode successively into the buffer solutions and rinse it. The complete set contains all liquids required for a professional calibration and storage of pH sensors

| Further information   |   |
|-----------------------|---|
| FAQ                   | ✓   |
| Blog                  | ✓   |
| Press                 | ✓   |
| Laboratory/calculator | ✗   |
| Worth reading         | ✓   |
| Spare parts           | ✗   |
| Video                 | ✗   |
| GarantiePlus          | ✗   |
| Instructions          | ✗   |
| QR code               |  |





# JBL PROFLORA CaI

|                  |   |
|------------------|---|
| Food type        | - |
| Sub product type | - |
| Dosing           | - |

