



JBL PROFLORA m500 SILVER

Refillable storage cylinder with 500 g CO₂

Suitable for:    



- Ideal CO₂ fertiliser supply for fast and slow growing aquarium plants
- Easy to use and effective: refillable 2 kg reusable cylinder (thread W 21.8 x 1/14)
- Reusable storage cylinder, ready filled with carbon dioxide – refillable
- TÜV tested, pressure cylinder with overpressure relief. A stand is required to ensure a steady position
- Package contents: refillable cylinder filled with 500 g CO₂. Dimensions: 43 x 11 cm, thread W 21.8 x 1/14



JBL PROFLORA m500 SILVER

Accessories



**JBL PROFLORA stand
CO2 storage cylinder
500 g**

Stand for cylinders of CO2
fertiliser systems




JBL PROFLORA m001
Fitting to reduce pressure



JBL PROFLORA m500 SILVER

 Spare parts

m001 + v002
64471 00

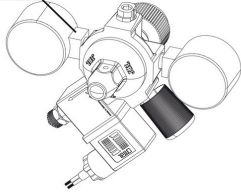

JBL ProFlora m001+
v002



JBL PROFLORA m500 SILVER



Product information


Disposable or reusable CO2 cylinder?

There are 2 different cylinder types: disposable cylinders that are disposed of and recycled after emptying and reusable cylinders that can be refilled again and again. Many pet shops and gas companies can carry out the refilling. If you, for example, live in a region where refilling is a problem, the disposable cylinder would be an alternative. Should the refilling situation improve, you can always convert the disposable pressure reducer into a reusable pressure reducer in 2 minutes by unscrewing the adapter (JBL PROFLORA ADAPT u-m). Aquarists who live on islands, for example, are sometimes not allowed to transport filled reusable cylinders on the ferry or plane. Disposable cylinders are then sometimes allowed!

The size of the cylinder often depends on the cabinet in which the CO2 storage cylinder is to be placed: A 500 g disposable bottle is only 31 cm high (plus pressure reducer = 37 cm), a 500 g reusable bottle with stand is already 43 cm high and a 2000 g bottle 45.5 cm high. Basically, of course, a larger cylinder is an advantage, because it simply needs to be replaced or refilled less frequently.

TÜV inspection of the CO2 cylinders:

All reusable CO2 cylinders must be inspected regularly, every 10 years, by the TÜV (at least in Germany). On the cylinder you will always find, but sometimes badly legibly, the date of the last TÜV inspection and sometimes the year of the next inspection.

Further information	
FAQ	✓
Blog	✓
Press	✓
Laboratory/calculator	✗
Worth reading	✓
Spare parts	✓
Video	✓
GarantiePlus	✗
Instructions	✗
QR code	





JBL PROFLORA m500 SILVER


Food type	-
Sub product type	-
Dosing	-





JBL PROFLORA m500 SILVER

Safety information

- safety information in accordance with GHS	
Signal word	Warning
Hazard symbol	
Risk phrase	H280: Contains gas under pressure; may explode if heated.
safety note	P101: If medical advice is needed, have product container or label at hand. P102: Keep out of reach of children. P103: Read label before use. P410+P403: Protect from sunlight. Store in a well-ventilated place.

Further safety information	
Safety instructions	✓
QR code	